

ExpressVote®

Voting with Reduced Human Touch



This document provides information regarding the use of disposable, single-use devices for no-contact voting on the ExpressVote touch screen. The ExpressVote screen uses resistive touch technology activated by physical touch.

YES

- Soft rubber-tip
- Cotton swabs, paper or opaque plastic straws, pencil erasers and wooden coffee stir sticks with rounded edges
- Standard length straws (approx. 8") can be cut in half allowing you to double your inventory

NO

- Devices made from glass, metal or ceramic
- Sharp or pointy objects (device tip must have a radius greater than 0.8 mm)



ES&S engineers have tested the use of these products.



Dispose of after use.

Questions? Contact Technical Support at: 877-377-8683 (U.S. and Canada) or technicalsupport@essvote.com

Support representatives are available Monday through Friday from 7:00 a.m. to 7:00 p.m. Central Time. ES&S support services are subject to the prices, terms and conditions at the time of service.